

# 快速安装指南



服务热线：400-088-7500

深圳市万网博通科技有限公司

## 欢迎惠顾！

感谢您选择TG-NET网络产品。

### 警告 !!


为防止本机引发意外的火灾或电击，请勿把本机放在雨点所及之处或潮湿的地方。

为防止触电，不可打开机体外壳。  
维修检查仅可委托专业人员进行。

以下是安装步骤：

## 第一步 硬件连接


1) 正确连接路由器设备：

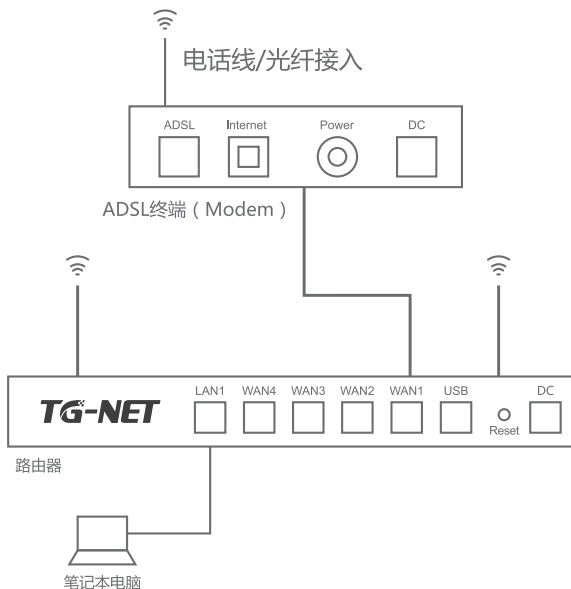

## 第二步 配置计算机

确认您的电脑网卡为自动获取IP地址。

- 1) 打开电脑>控制面板>网络和Internet>网络连接；
- 2) 鼠标右键点击“本地连接”，选择“属性”；
- 3) 在属性对话框中双击“Internet协议版本4（TCP/IPv4）”（如下图）；
- 4) 在“Internet协议版本4（TCP/IPv4）”对话框中，确认选项为“自动获取IP地址”、“自动获得NDS服务器地址”，确认退出（如下图）。

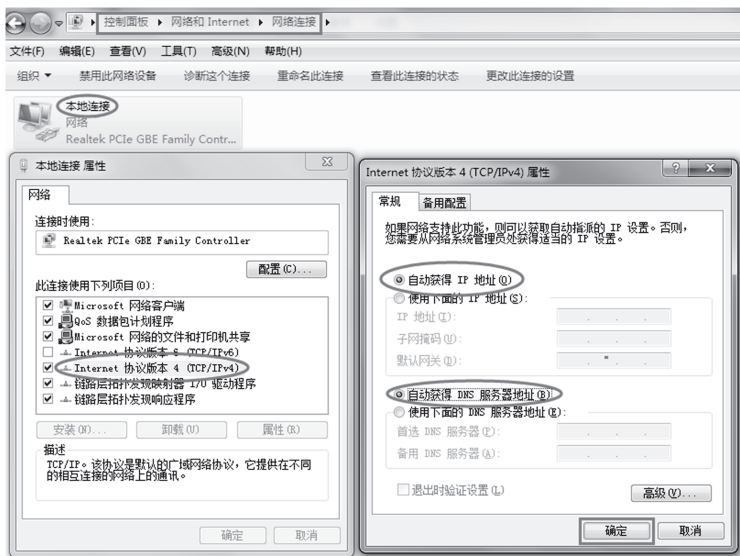

## 第三步 路由器设置

1) 打开浏览器，输入192.168.1.1，打开TG-NET路由登录界面，输入用户名密码，均为“admin”（图一）。



2) 点击登录按钮，进入路由器管理界面（图二）。





3) 进入路由器设备界面>快速向导>点击下一步。



4) 设置外网: 开通网络时, 运营商提供给您用户名、密码, 请选择PPPoE/ADSL拨号接入 (若提供IP地址、子网掩码、网关则选择固定IP接入)。



5) 设置局域网：TG-NET默认LAN口地址为192.168.1.1网段，如客户不作修改，可直接“下一步”跳过；

The screenshot shows the 'TG-NET 万网博通' web interface. The top navigation bar includes '快速向导' (Quick Wizard) and '快速上网配置向导' (Quick Internet Configuration Wizard). The left sidebar lists various system settings. The main content area is titled '步骤2: LAN(内网口)设置' (Step 2: LAN (Internal Network Port) Settings). It contains the following fields and options:

| Field/Option                                                                                                                     | Value/Status                        |
|----------------------------------------------------------------------------------------------------------------------------------|-------------------------------------|
| IP地址 (IP Address)                                                                                                                | 192.168.1.1                         |
| 子网掩码 (Subnet Mask)                                                                                                               | 255.255.255.0                       |
| MAC地址 (MAC Address)                                                                                                              | ac:31:9d:a0:04:ef                   |
| 留空表示使用默认MAC, 请使用格式如: 00:33:44:55:66:77 (Leave blank to use default MAC, use format like 00:33:44:55:66:77)                       | <input type="checkbox"/>            |
| 启用LAN口的DHCP服务器功能 (Enable DHCP server function on LAN port)                                                                       | <input checked="" type="checkbox"/> |
| 勾选该选项将在LAN口上启用给内网主机动态分配地址功能 (Selecting this option will enable dynamic IP allocation for internal network hosts on the LAN port) | <input checked="" type="checkbox"/> |

At the bottom right, there are buttons for '上一步' (Previous Step) and '下一步' (Next Step).

6) 设置无线WiFi: 针对具备无线功能的产品, 可继续进行无线参数配置:

The screenshot shows the 'TG-NET 万网博通' web interface. The top navigation bar includes '快速向导' (Quick Wizard) and '快速上网配置向导' (Quick Internet Configuration Wizard). The left sidebar lists various system settings. The main content area is titled '步骤3: 无线WiFi设置' (Step 3: Wireless WiFi Settings). It contains the following fields and options:

| Field/Option                                                              | Value/Status                        |
|---------------------------------------------------------------------------|-------------------------------------|
| 禁用 (Disable)                                                              | <input type="checkbox"/>            |
| 网络名称 (Network Name)                                                       | TG-NET_wifi                         |
| SSID可由数字、字母和下划线组成 (SSID can consist of numbers, letters, and underscores) | <input checked="" type="checkbox"/> |
| 加密类型 (Encryption Type)                                                    | WPA-PSK/WPA2-PSK                    |
| 密码 (Password)                                                             | *****@                              |
| 密码的长度范围是8-63 (Password length range is 8-63)                              | <input checked="" type="checkbox"/> |

At the bottom right, there are buttons for '上一步' (Previous Step) and '下一步' (Next Step).

7) 配置完成后, 点击保存。

The screenshot shows the 'TG-NET 万网博通' web interface. The top navigation bar includes '快速向导' (Quick Wizard) and '快速上网配置向导' (Quick Internet Configuration Wizard). The left sidebar lists various system settings. The main content area is titled '步骤4: 向导完成' (Step 4: Wizard Completed). It contains the following text:

请按保存按钮使上述向导配置生效, 按下保存应用按钮后, 2分钟后请F5刷新, 如页面没有反应, 请重启设备。另外, 您不想使向导配置生效, 那么可按退出向导按钮离开向导。

At the bottom right, there are buttons for '退出向导' (Exit Wizard) and '保存应用' (Save and Apply).

正确配置之后, 即可体验到TG-NET路由器的强大功能; 如有任何问题, 请致电400-088-7500, TG-NET将为您提供用心、专业的服务。  
具体路由器的功能设置, 请参考官网说明: <http://www.tg-net.cn>